

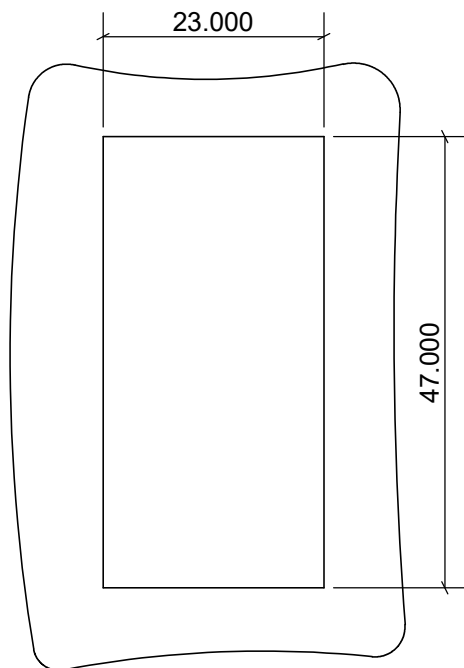


## IMPORTANT SAFE GUARDS:


- THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.
- DISCONNECT POWER BEFORE BEGINNING INSTALLATION.
- FIXTURE MUST BE INSTALLED IN COMPLIANCE WITH THE NATIONAL ELECTRIC CODE AND ANY LOCAL CODES.
- TO BE INSTALLED ONLY BY A QUALIFIED ELECTRICIAN.
- PROPER GROUNDING IS REQUIRED TO INSURE PERSONAL SAFETY.
- READ ALL FIXTURE MARKINGS AND LABELS TO ENSURE CORRECT INSTALLATION OF FIXTURE.
- RISK OF FIRE, USE A MINIMUM OF 90C SUPPLY CONNECTORS.

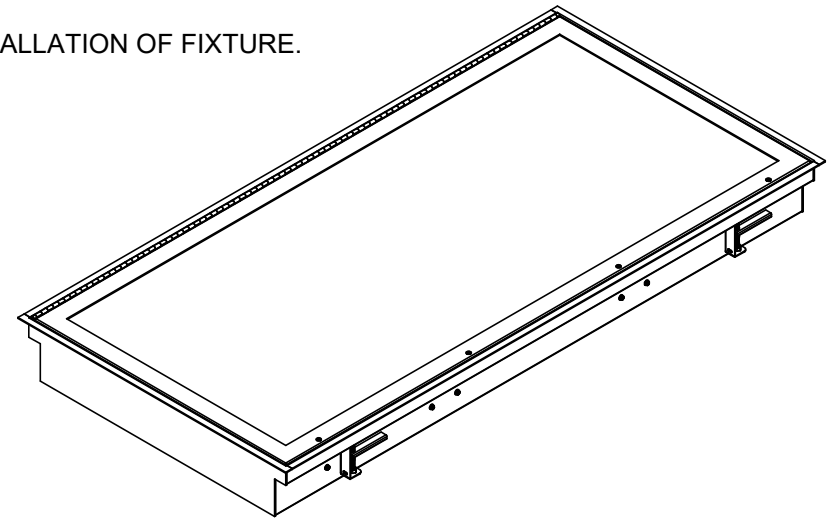


57R24

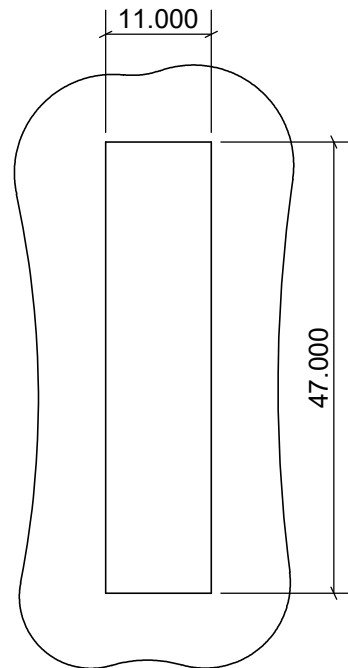

57R14

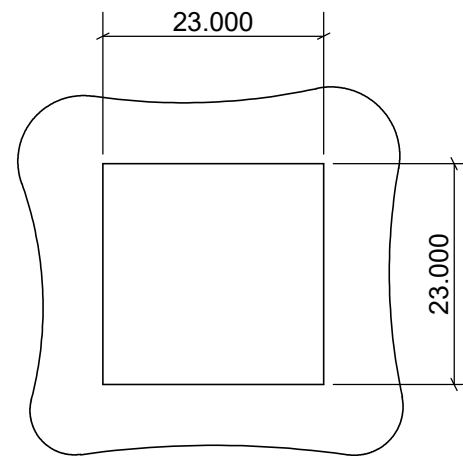


57R22

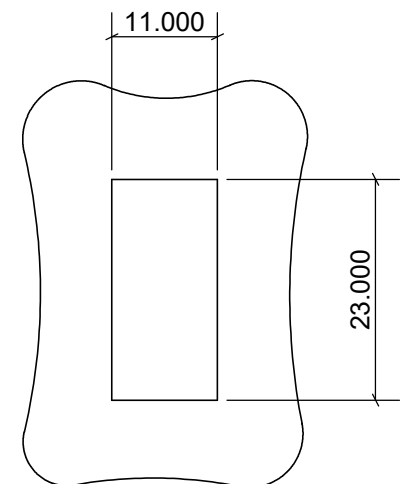


57R12

INSTALLATION INSTRUCTIONS:


1. Remove door frame fasteners.

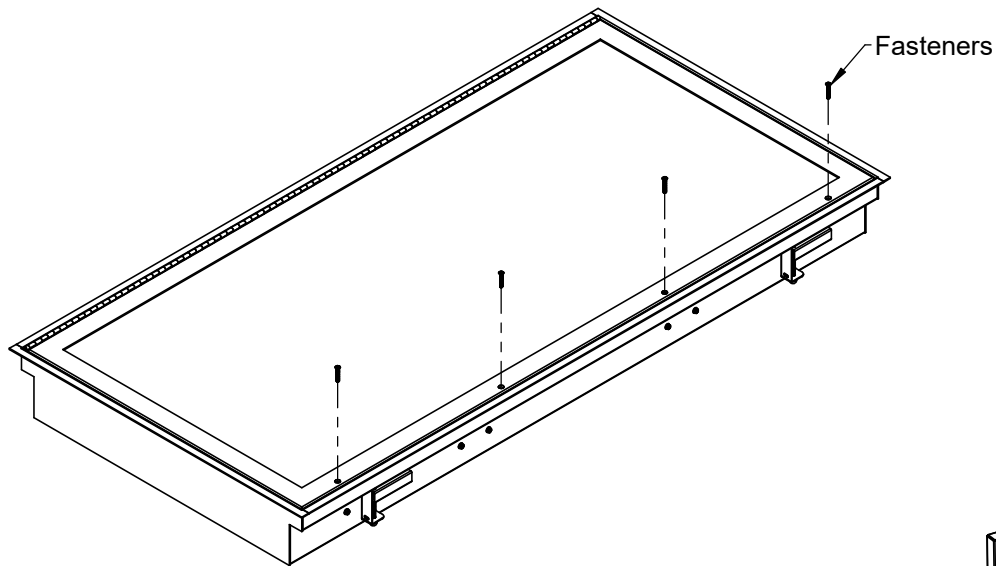



2. Remove (4) fasteners to uninstall LED gear tray .

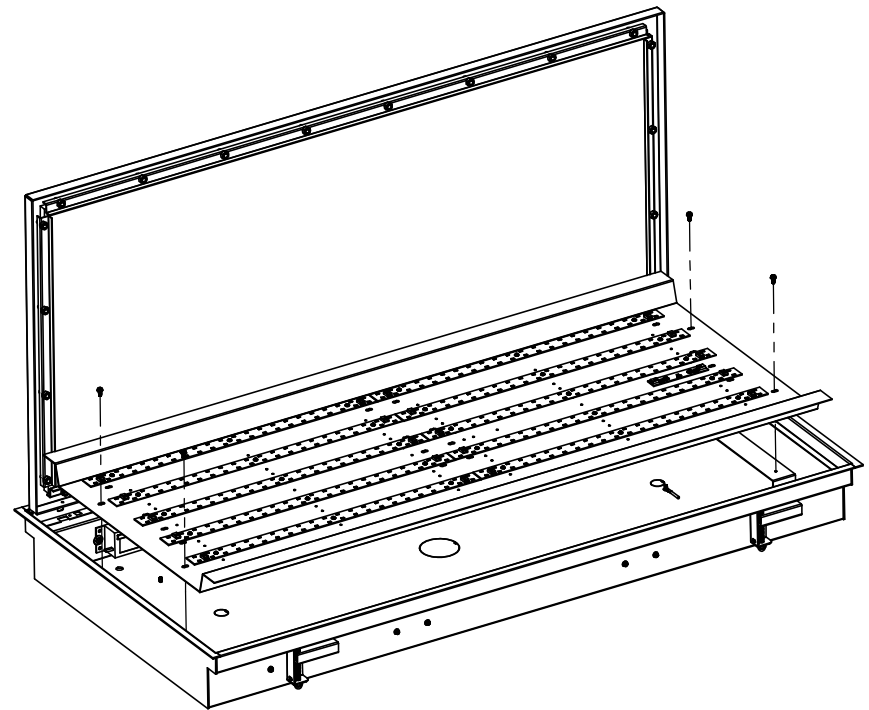


3. Raise fixture in to ceiling.

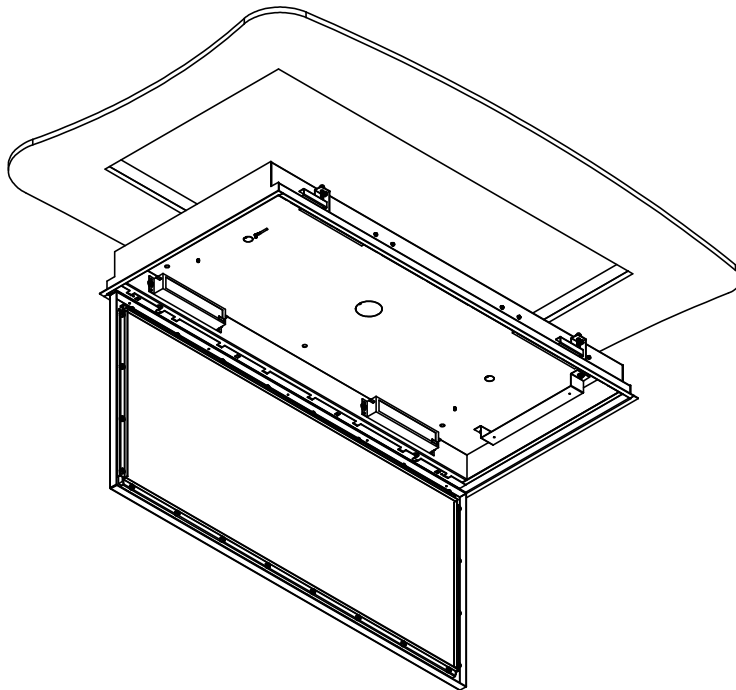


4. Adjust swing arms accordingly.

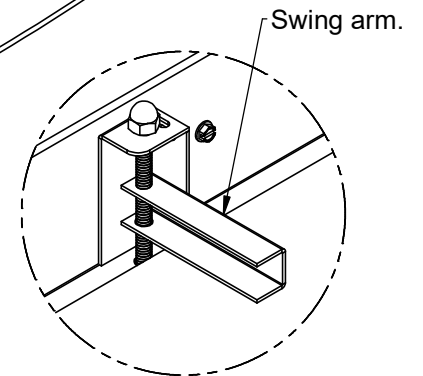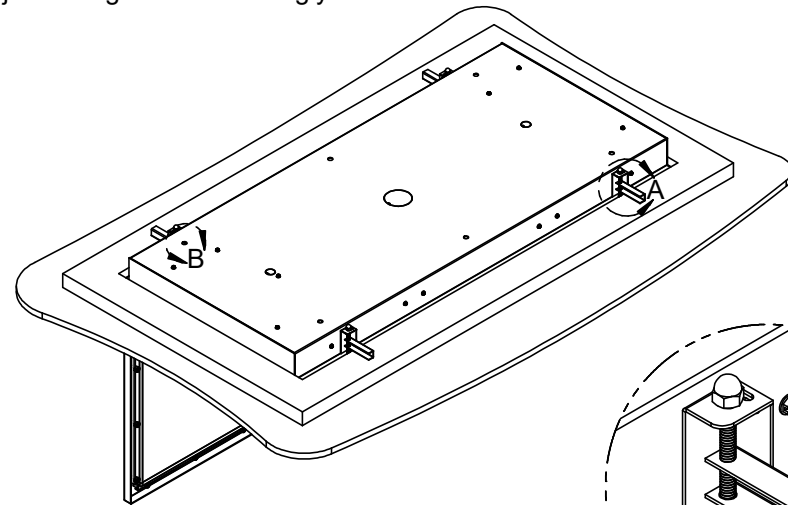

DETAIL A

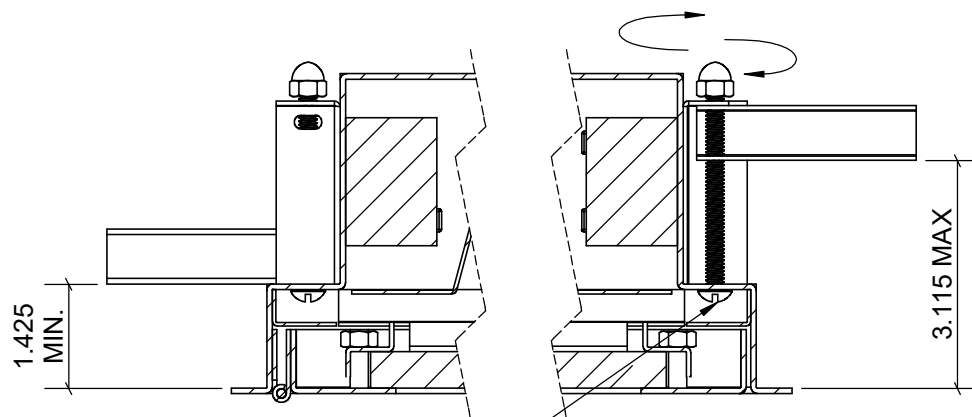


Rotate screw clockwise or counter clockwise to adjust swing arm as needed.

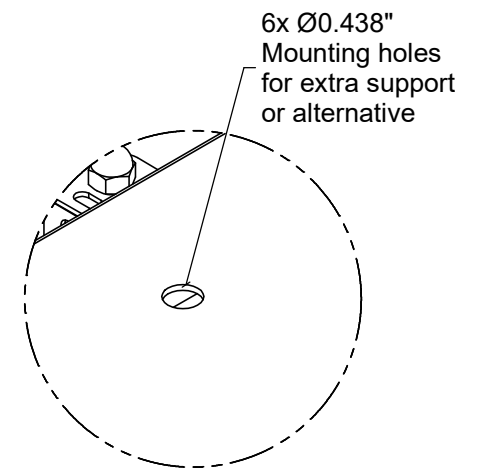

DETAIL B

**5.** Make necessary electrical connections then re-attach LED gear tray with fasteners.

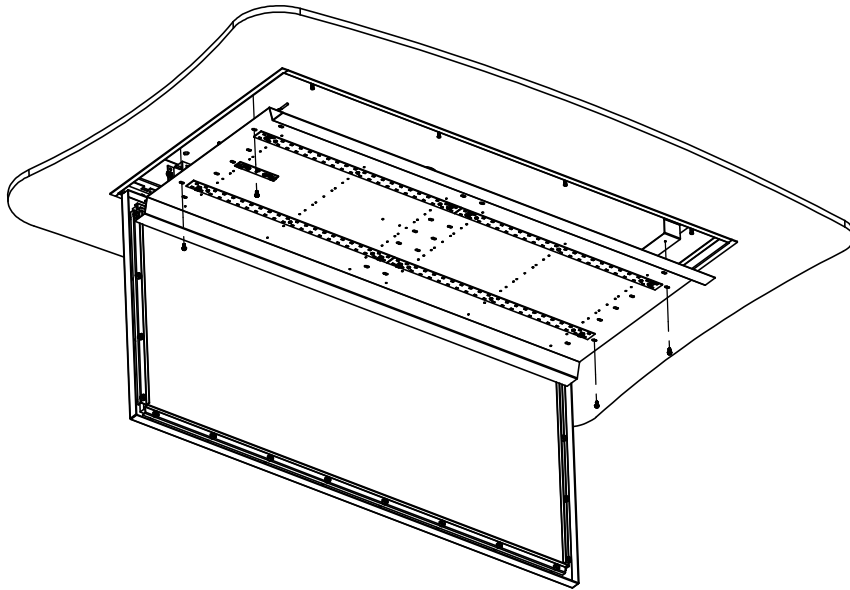

**6.** Fasten frame screws to secure frame and complete install.

