



IMPORTANT SAFE GUARDS:


- THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.
- DISCONNECT POWER BEFORE BEGINNING INSTALLATION.
- FIXTURE MUST BE INSTALLED IN COMPLIANCE WITH THE NATIONAL ELECTRIC CODE AND ANY LOCAL CODES.
- TO BE INSTALLED ONLY BY A QUALIFIED ELECTRICIAN.
- PROPER GROUNDING IS REQUIRED TO INSURE PERSONAL SAFETY.
- READ ALL FIXTURE MARKINGS AND LABELS TO ENSURE CORRECT INSTALLATION OF FIXTURE.
- RISK OF FIRE, USE A MINIMUM OF 90C SUPPLY CONNECTORS.

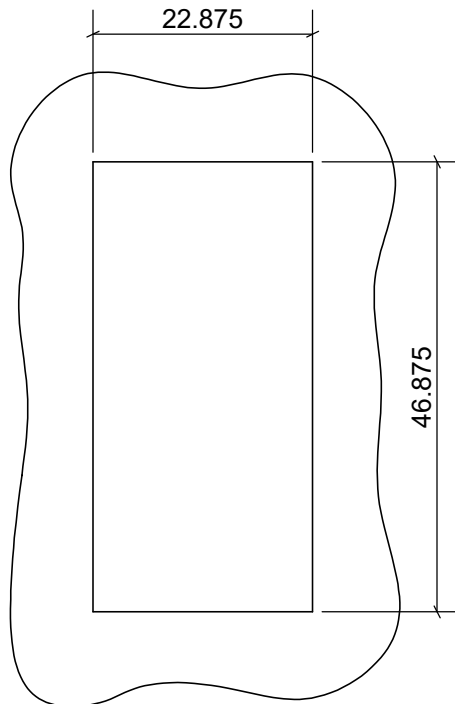


**2x4 CEILING
CUT OUT**

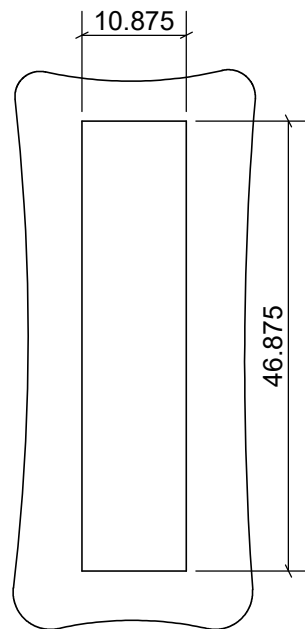

**1x4 CEILING
CUT OUT**

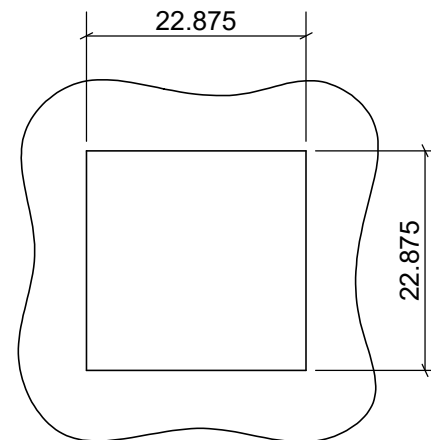


**2x2 CEILING
CUT OUT**

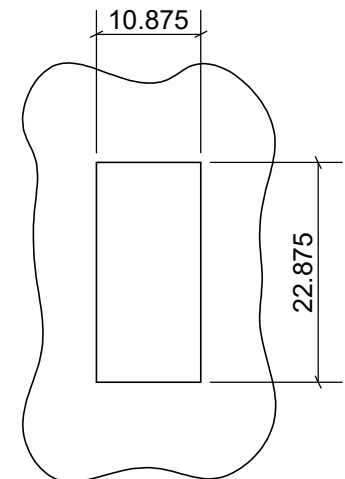


**1X2 CEILING
CUT OUT**

INSTALLATION INSTRUCTIONS:

1. Remove Door Frame Fasteners.



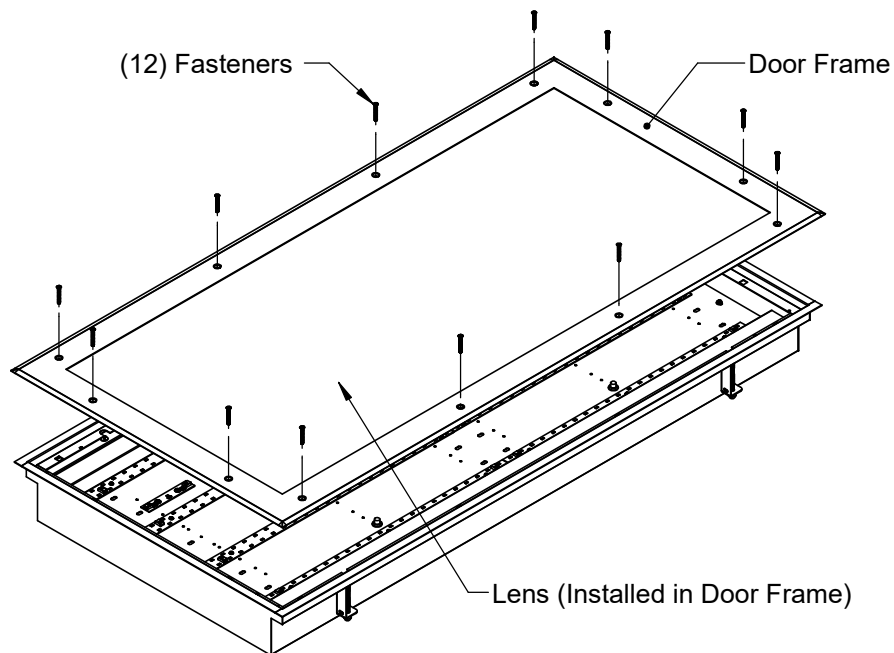


2. Remove LED Gear Tray.


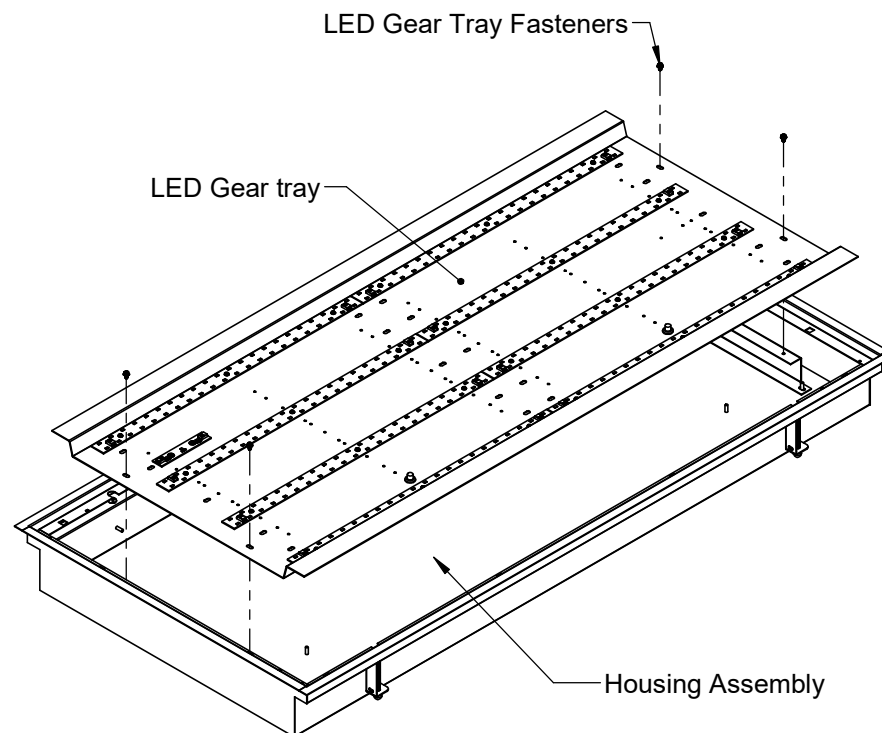


3. Raise fixture into ceiling.


4. Adjust swing arms accordingly.

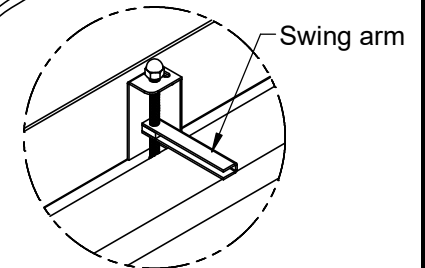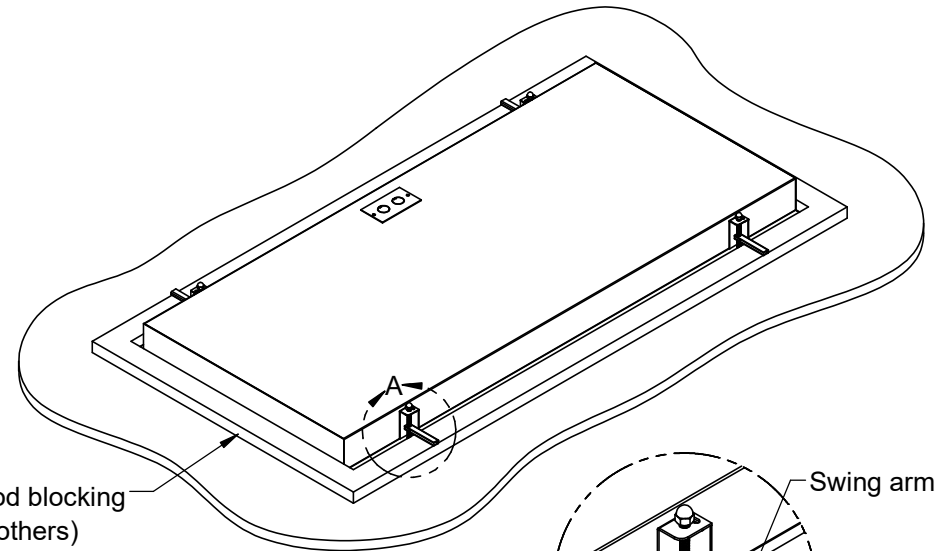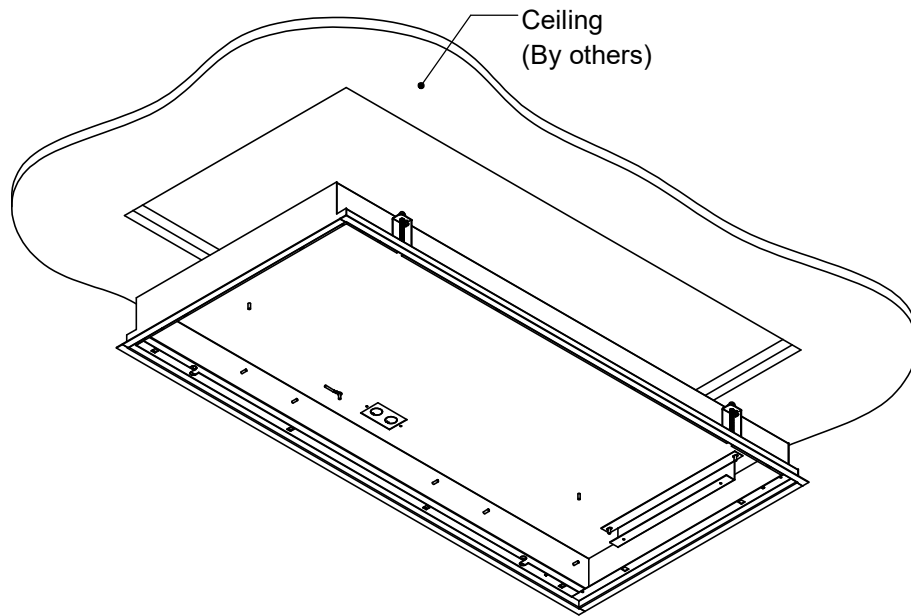

DETAIL A
SCALE 1 : 5

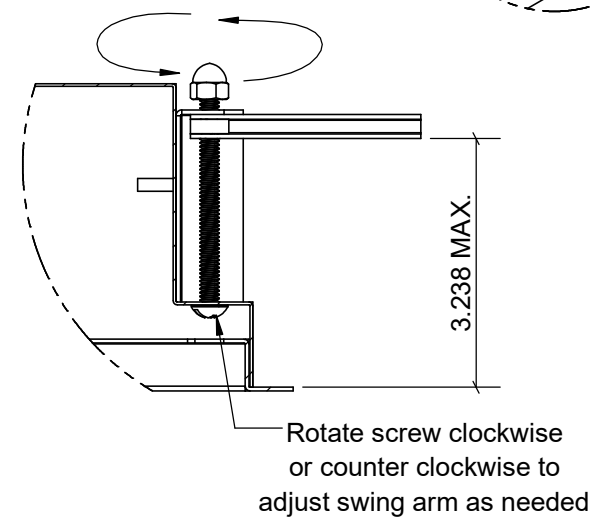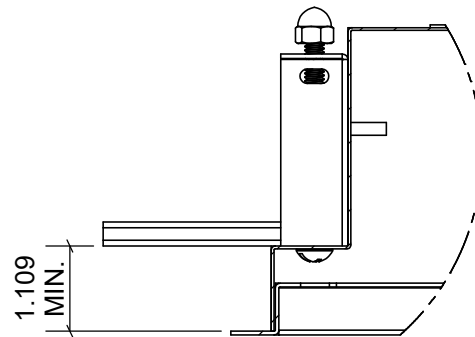

5. After making necessary electrical connections, reattach LED gear tray.

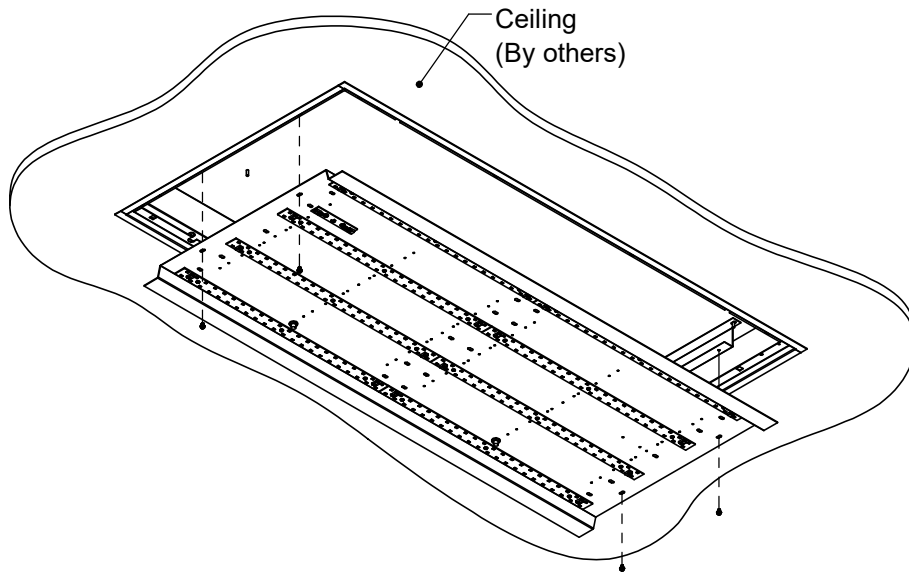

6. Re-attach frame.

